

Wood Trim and Tray Installation Instructions

- 6) Install the tray with #10 X 1" wood screws, as shown in Diagram A. Like the trim installation, pre-drill 1/16" holes and again use the counter sink bit to create small cavities to hide the screw heads. Install wood screws every 16" on center slightly offset from the trim installation hardware.
- 7) If a splice is required, follow Diagrams D and E. The spliced pieces of wood require 45° angle cuts for the joint to have a good appearance. Apply a small amount of the construction adhesive between the two pieces of trim. Press the pieces together and install finishing nails, for trim, and screws, for tray, on each side of the splice, approximately 1 1/2" from the splice. On the trim, counter-sink the finish nails and patch with wood filler of similar color.

Trim Splice

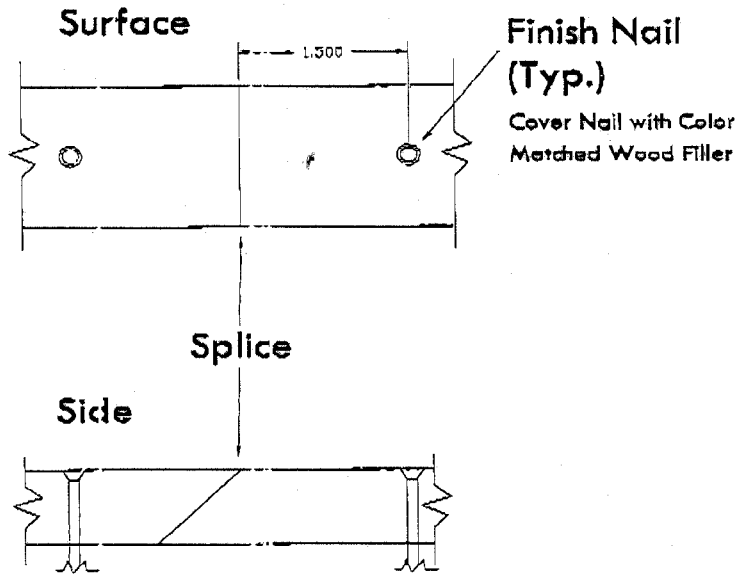


Diagram D

Tray Splice

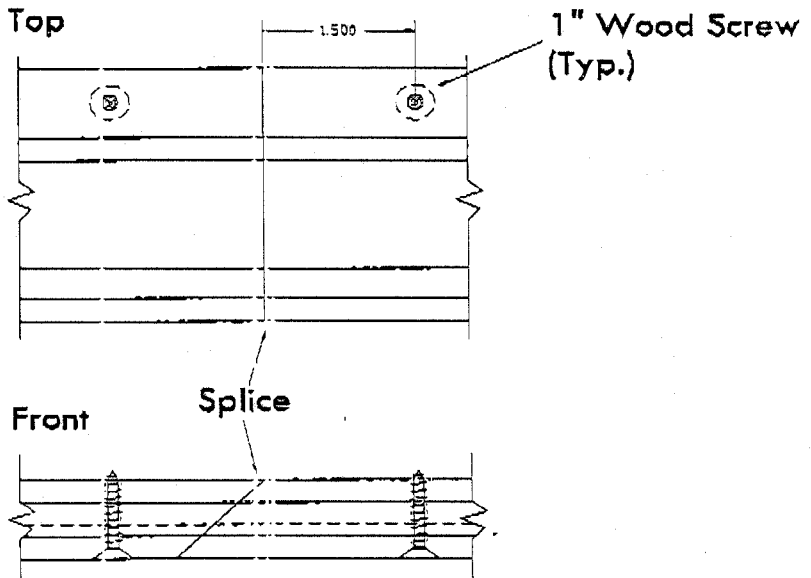


Diagram E

Indoff
140 WEST WYND TERRACE
MIDDLETOWN, CT 06457
(860) 632-2026
FAX (860) 632-2028
www.ahutton.com